 


Inwa®

MZ-500K Wireless Speaker

User's Manual

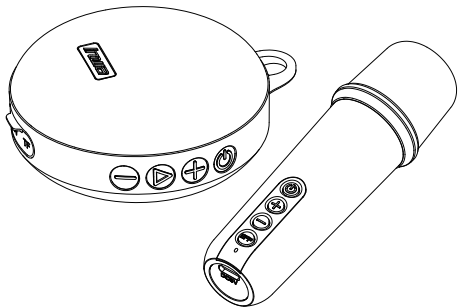

Please read the manual carefully before use, and use it strictly according to the requirements of the manual. After reading, please keep it in a safe place for future reference.

Inwa®

English


SAFETY INSTRUCTIONS

- Please adjust this product to the appropriate volume to avoid damage to your hearing.
- Do not throw to avoid damage to the speaker due to falling.
- Do not place this product near the heat source, and avoid the radiator, stove and other equipment that will generate heat.
- No matter what reason the equipment is damaged, it must be repaired by professional maintenance personnel in time. Unauthorized disassembly will invalidate the warranty.
- This speaker has two modes: Bluetooth mode and TF card mode. When the speaker turns off the microphone function and the music pauses for 10 minutes, the speaker will go into sleep shutdown. To restart the speaker, press the power button "⏻".

PACKAGE CONTENTS

- | | | | |
|--------------|----|-------------------------|----|
| • Speaker | X1 | • Mountaineering buckle | X1 |
| • Microphone | X1 | • USB charging cable | X1 |
| • Manual | X1 | | |

 CONTROL PANEL AND INTERFACE

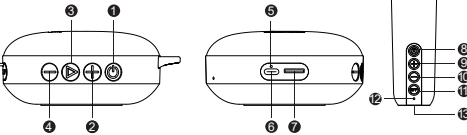

- 1 ⏻: Power on/off/mode: press and hold for 2 seconds to turn on/off; Double-click to switch BT/TF mode in the power-on state, and briefly press to turn off/turn on the microphone. The microphone is turned on by default.
- 2 +: Increase the volume: long press to increase the volume, short press to next song.
- 3 ▶: Play/Pause/Pair: in the speaker Bluetooth connection status or TF card mode, press briefly to play/pause; In the Bluetooth connection status of the speaker, long press for 2 seconds to forcibly disconnect the current connection, enter the Bluetooth pairing status, and double-click to enter the recording mode, long press for 8 seconds to switch between Chinese and English.
- 4 -: Decrease the volume: long press to decrease the volume, short press to the previous song.
- 5 Power/Charge indicator (blue/red light) 6 Power Port: DC 5V 1A 7 TF Slot
- 8 ⏻: Switch on/off button: press and hold for 2 seconds to turn on and 3 seconds to turn off.
- 9 +: Volume up button: press the microphone to increase the volume.
- 10 -: Volume down button: press the microphone to decrease the volume.
- 11 EFF: Sound effect button: single click in the order of KTV → monster → baby sound → mute on → host.

- 12 Indicator light: in the charging state, the red light is always on, and the red light is off when full; When the microphone is connected, the blue light flashes quickly, and the blue light stays on when working.

- 13 Power Port: DC 5V 1A


PRODUCT PARAMETERS

- | | |
|-----------------------------------|-----------------------------|
| • Working hours: 10hr(60% volume) | • Charging time: 2-4 hours |
| • Standby time: ≥300 hours | • Working voltage: 5V/1A |
| • Bluetooth range: ≤10m | • Rated power: 8W |
| • Frequency response: 20HZ-20KHZ | • Waterproof level: IP67 |
| • Bluetooth version: V5.0 | • Battery capacity: 1800mAh |

OPREATION INSTRUCTION

• Step 1

 Long press the power button "⏻" for 2 seconds, there will be a power-on prompt sound. After power-on, the blue indicator light flashes quickly, and the speaker enters the Bluetooth pairing state, and the default volume is 80%. Each time the speaker is turned on, the speaker will automatically restore the default volume of 80%.



Notice:

 
Inserting a TF card during Bluetooth playback will automatically switch to TF card playback mode.

• Step 2

Turn on the Bluetooth function on your mobile phone or other Bluetooth device, and then search for the speaker named MZ-500K. Connect to the speaker.


• Step 3

After the pairing is successful, there will be a prompt tone and the blue indicator light will be on for a long time.



• Step 4

 Play music on your phone. When playing music, the blue indicator light flashes slowly.

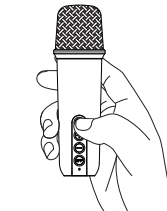

• Step 5

Press and hold the microphone and speaker power button "⏻" to turn on the microphone, and press and hold the power button "⏻" to quickly flash the blue indicator light of the microphone to pair the microphones. The blue indicator light will stay on when working.

• Step 6

How to connect speakers with new equipment:

When connecting the speaker to the device, you can press and hold the Play/Pause/Pairing button "▶" for 2 seconds to cut off the current connection and enter the pairing state. Then, the blue indicator will flash fast and the speaker can be connected to the new device.



Note:

When Bluetooth is turned on, it will automatically reconnect, and it will turn off after 10 minutes without connection.

CHARGING TIPS

1. When the battery is low, the speaker will give a "low battery" prompt. You need to charge the speaker.
2. When charging, the red indicator light is always on, and the red indicator light is off when fully charged.
3. It is recommended to charge the product with lithium battery every three months if it is not used.

CONNECTION MEMORY FUNCTION OF THE SPEAKER

- The speaker will automatically connect to the last paired device, in case that BT function of the device is on, after turning the speaker on.

 
RECORDING MODE

- On the premise of inserting the TF card into the speaker, double-click the play/pause/pairing button "▶" in the playback status to set the recording mode; Double-click the play/pause/pair button "▶" again to stop recording; When in TF card mode, long Play the recorded recording for 2 seconds.

TF CARD MODE

After inserting the TF card, the speaker will enter the TF card mode. You can double click the power button "⏻" to enter the mode switch.

In TF card mode, when playing music, the blue indicator light flashes slowly.



Warranty card

Model	Date of purchase
Distributor	Name
TEL	E-mail
ADD	

Warranty records

Name	Fault description	Repair date	Maintainer

CERTIFICATE

 
DATE: _____

QC: _____

Inwa®

MZ-500K无线音箱

使用说明书

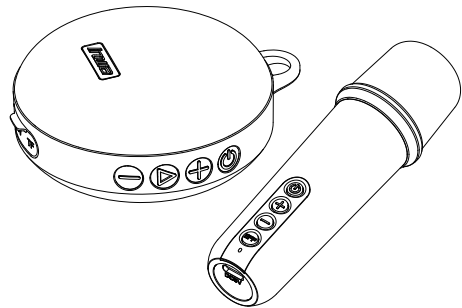


使用前请仔细阅读说明书，并严格按说明书要求使用，阅读后请妥善保管，以备日后查阅

Inwa®

中文

 
安全须知

- 请将本产品调至合适音量，避免对您的听力造成损害。
- 请勿丢掷，避免因跌落造成音箱损坏。
- 请勿将本产品放置在热源附近，避免靠近散热器，火炉和其它会发热的设备。
- 无论设备因何种原因损坏，都必须及时请专业维修人员修理，擅自拆卸将使保修失效。
- 此音箱有2种模式：蓝牙模式和TF卡模式。当音箱关闭麦克风功能且音乐暂停10分钟后，音箱将进入休眠关机。要重新启动音箱，请按电源按钮“”。





包装内容

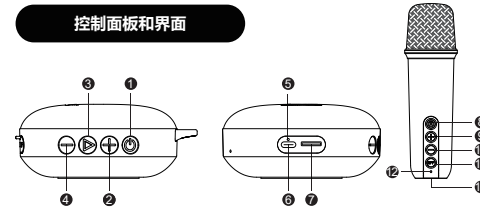- | | | | |
|-------|----|----------|----|
| • 音箱 | X1 | • 登山扣 | X1 |
| • 话筒 | X1 | • USB充电线 | X1 |
| • 说明书 | X1 | | |





控制面板和界面



音箱

- ① ：电源开/关/模式：长按2秒为开/关机；开机状态双击切换BT/TF模式，短按关闭/打开麦克风，麦克风默认开启。
- ② ：增加音量：长按为音量加，短按为下一曲。
- ③ ：播放/暂停/配对：在音箱蓝牙连接状态，或TF卡模式下，短按可以播放/暂停；在音箱蓝牙连接状态下，长按2秒强制断开当前连接，进入蓝牙配对状态，双击为录音模式，长按8秒进行中英文切换。
- ④ ：降低音量：长按为音量减，短按为上一曲。
- ⑤ 电源/充电指示灯（蓝/红灯） ⑥ 电源接口：DC 5V 1A ⑦ TF卡接口


话筒


- ⑧ ：开关机键：长按2秒开机，长按3秒关机。
- ⑨ ：音量加键：单按话筒为音量加。
- ⑩ ：音量减键：单按话筒为音量减。
- ⑪ ：音效键：单按依次为KTV→怪兽→娃娃音→消原音开→主持人。
- ⑫ 指示灯：在充电状态，红灯常亮，充满红灯熄灭；在麦克风配对状态下，蓝灯快闪，工作时蓝灯长亮。
- ⑬ 电源接口：DC 5V 1A

产品参数

- | | |
|----------------------|----------------|
| • 工作时长：60%音量连续工作10hr | • 充电时长：2-4hr |
| • 待机时长：≥300hr | • 工作电压：5V/1A |
| • 蓝牙范围：≤10m | • 额定功率：8W |
| • 频率响应：20HZ-20KHZ | • 防水等级：IP67 |
| • 蓝牙版本：V5.0 | • 电池容量：1800mAh |

操作指令

 
- 步骤1
长按电源按钮“”2秒，有开机提示音，开机后，蓝色指示灯快闪，音箱进入蓝牙配对状态，默认音量80%，每次打开音箱后，音箱都会自动恢复默认音量80%。



注意：

 在蓝牙播放时插入TF卡则自动切换到TF卡播放模式。



- 步骤2
打开手机或其他蓝牙设备上的蓝牙功能，然后搜索名为MZ-500K的音箱，与音箱连接。
- 步骤3
配对成功后会有提示音，蓝色指示灯长亮。



步骤4

在手机上播放音乐。播放音乐时，蓝色指示灯慢闪。


步骤5

分别长按话筒、音箱电源按钮“”开机，3击开机按钮“”话筒蓝色指示灯快闪进行麦克风配对，工作时蓝色指示灯长亮。



步骤6

如何将音箱与新设备连接：

在音箱与设备连接时，您可以长按播放/暂停/配对按钮“”2秒以切断当前连接并进入配对状态。然后，蓝色指示灯将快闪，音箱可以与新设备连接。



注意：

蓝牙状态开机自动回联，无连接10分钟关机。



充电提示

- 1.低电量时音箱发出“电量低”提示，您需为音箱进行充电。
- 2.充电时，红色指示灯常亮，充满电后红色指示灯熄灭。
- 3.建议对带锂电池产品如不使用时每三个月充一次电。


蓝牙音箱连接记忆功能

- 如果设备蓝牙功能开启，打开音箱后，音箱将自动连接到最后一个配对设备。

 
录音模式

- 音箱在插入TF卡的前提下，播放状态时双击播放/暂停/配对按钮“”为录音模式；再次双击播放/暂停/配对按钮“”为停止录音；在TF卡模式时，长按2秒播放所录制的录音。

TF卡模式

插入TF卡后，音箱将进入TF卡模式，您可以双击电源按钮“”进入模式切换。

在TF卡模式下，当播放音乐时，蓝色指示灯慢闪。



保修卡

产品型号	购买日期
经销商	用户姓名
联系电话	电子邮件
用户地址	

保修记录

用户姓名	故障描述	维修日期	维修人员签字

合格证

日期：_____
检验员：_____